

urilock® exchange

1. Open

- » Insert the uridan® hook into the elongated cover opening and turn 90°.
- » Remove the cover by lifting upwards and then submerge it in a bucket full of water.




2. Clean

- » Pull out the angularly cut pipe with the aid of combination pliers. This allows the contents of the odour trap to flow into the drain.
- » Clean away the urine residue with the brush and then rinse away with water from the bucket.



3. Refill

- » Use the combination pliers to reinsert the angularly cut pipe until you feel a resistance. You will hear a "click" when the pipe locks into place.
- » Fill the odour trap with water until it flows back out over the top edge of the angularly cut pipe.

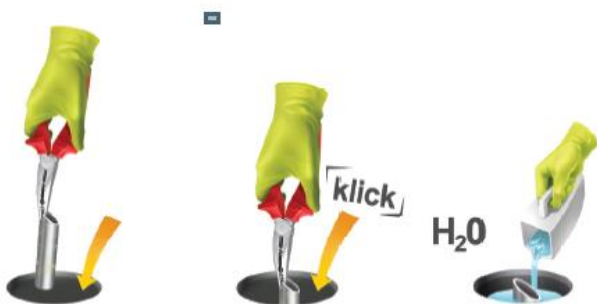

4. Close

- » Replace the cover.
- » Pour new urilock® blocking fluid directly over the cover.

