

Installation Instructions



Admiral

by designer Troels Bøgely

Model: GH-10
Material: glass reinforced plastic (GRP)
Installation: horizontal


Installation of the uridan water free urinals is very simple.

If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation.

The uridan urinals work without water, and must be fitted to a 50mm waste pipe. Installation should be carried out by an authorised plumber in accordance with AS/NZS 3500.2.

PLEASE NOTE: The undiluted discharge from a waterless urinal must not be transported through copper or copper alloy pipework

1. Mark holes for fitting No. (1) and install bracket.
2. Insert extension pipe (position D) on the 87 ° bend (Position C). Keep the distance of 100 mm from the wall to the middle of the pipe. If necessary shorten the extension pipe. Place the 87 ° bend with the extension pipe on the outlet pipe.
3. Adjust fitting No. (15), mark holes, drill holes and mount fitting No. (15).
4. Remove the 87 ° bend with the extension pipe and connect this firmly to the urinal's waste trap (Position B).
5. Connect the urinal with the pipe attached to the waste pipe. Lift the urinal gently and place on bracket No. 1
6. Fill the waste trap (Position B) with water.
7. Insert the stainless steel cover (Position A).
9. Pour 1 bottle uriLOCK (0.3 litres) over the cover.
8. Seal the gap between the wall and the urinal with silicone. **Please note:** Do not put any silicone on the lower tip of the urinal!

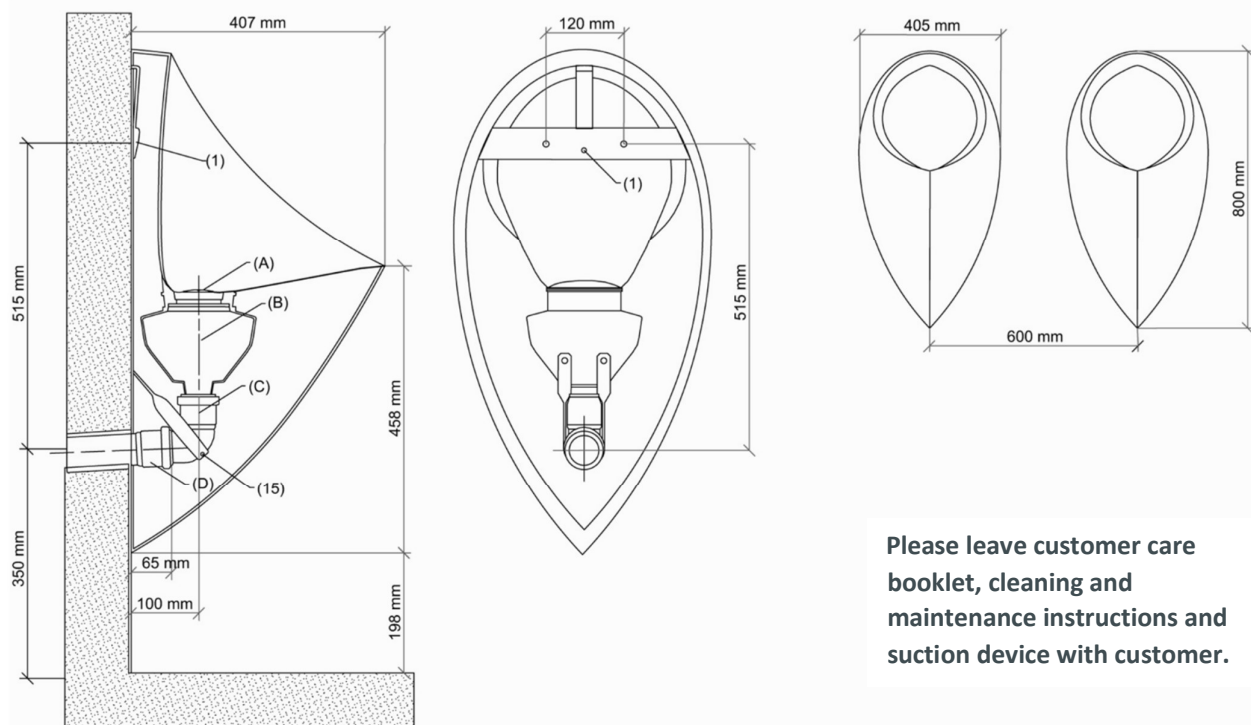

Please leave customer care booklet, cleaning and maintenance instructions and suction device with customer.