

## Installation Instructions



### Admiral

by designer Troels Bøgely

Model: GV-10  
Material: glass reinforced plastic (GRP)  
Installation: vertical

**Installation of the uridan water free urinals is very simple.**


If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation.

The uridan urinals work without water, and must be fitted to a 50mm waste pipe. Installation should be carried out by an authorised plumber in accordance with AS/NZS 3500.2.

**PLEASE NOTE:** The undiluted discharge from a waterless urinal must not be transported through copper or copper alloy pipework.

1. Mark holes for fitting No. (1) and install bracket.
2. Install waste pipe as per drawing below. Hold the urinal against the wall and push firmly over fitting no. (1)
3. Fill the waste trap (Position B) with water.
4. Insert the stainless steel cover (Position A).
9. Pour 1 bottle uriLOCK ( 0.3 litres) over the cover.
8. Seal the gap between the wall and the urinal with silicone.

The urinal is now ready for use!

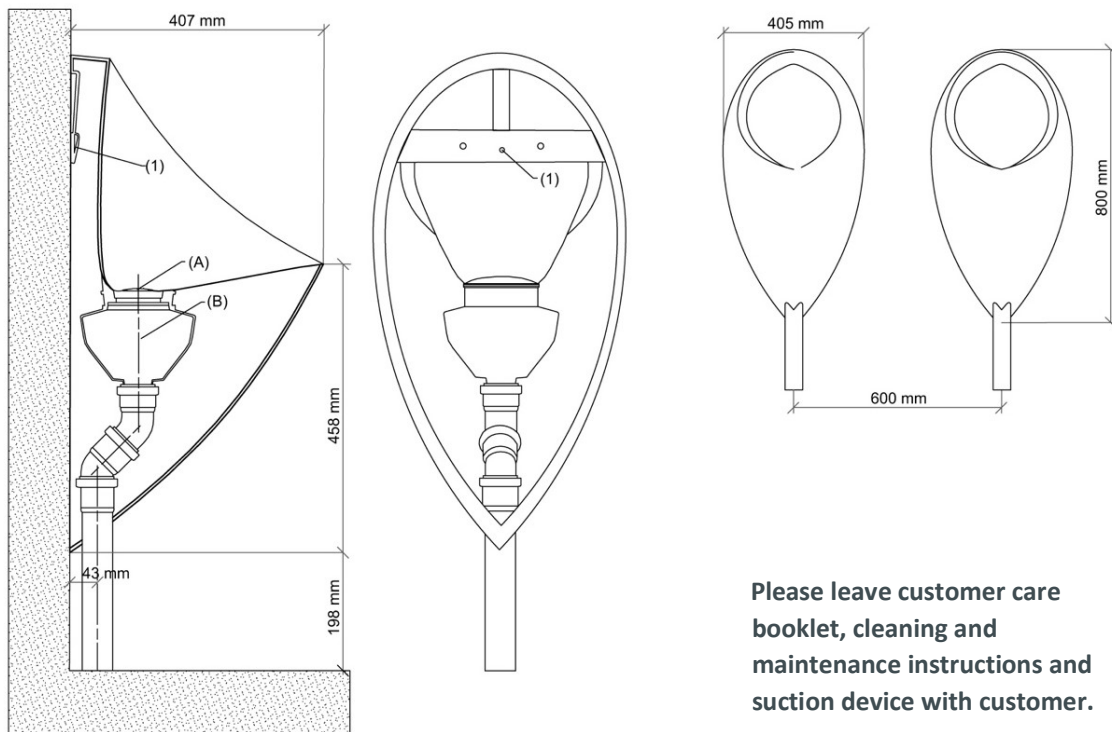

**Please leave customer care booklet, cleaning and maintenance instructions and suction device with customer.**