

## Installation Instructions



### Cadet

by designer Troels Bøgely

Model: KHC-10  
Material: ceramic  
Installation: horizontal


**Installation of the uridan water free urinals is very simple.**

If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation.

The uridan urinals work without water, and must be connected with a 50mm waste pipe. Installation should be carried out by authorised plumbers in accordance with AS/NZS3500.2.

**PLEASE NOTE:** The undiluted discharge from a waterless urinal must not be transported through copper or copper alloy pipework.

1. Take the height from the center of the waste pipe and mark the holes for both special screws No. (19). Drill holes and mount brackets.
2. Install the 87° bend, keeping the distance of 100 mm from the wall to the middle of the pipe. The pipe connection is now established.
3. Adjust fitting No. (15), mark holes, drill holes and mount fitting No. (15)
4. Hold the urinal against the wall and push firmly onto the fitting No. (4) – ensuring the pipe is connected firmly.  
**Please note:** Between urinal and wall should be a gap of approx. 2 to 5 mm so tension cracks can be prevented.
5. Fill the waste trap (Position B) full with water.
6. Insert the stainless steel cover (Position A).
7. Pour 1 bottle uriLOCK ( 0.3 litres) over the cover.
8. Seal the gap between the wall and the urinal with silicone.
9. The uridan urinal is now ready for use!

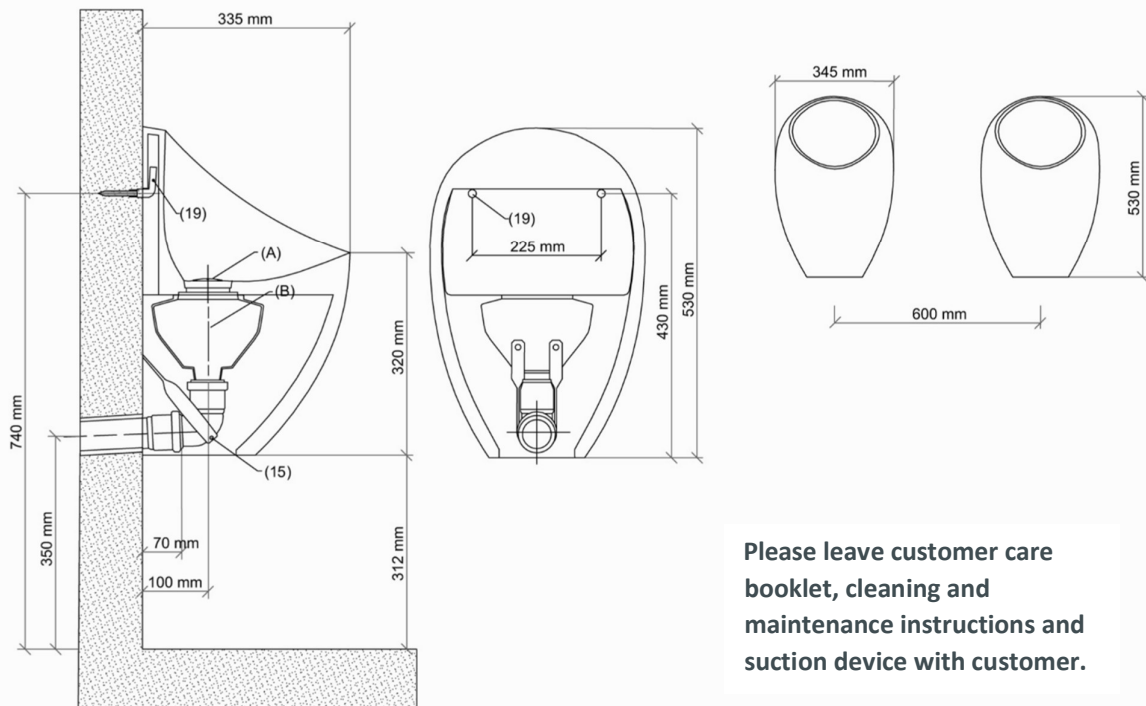

**Please leave customer care booklet, cleaning and maintenance instructions and suction device with customer.**