

Installation Instructions



Cadet

by designer Troels Bøgely

Model: KVC-10

Material: ceramic

Installation: vertical


Installation of the uridan water free urinals is very simple.

If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation.

The uridan urinals function without water, and must be connected with a 50mm waste pipe. Installation should be carried out by authorized plumbers in accordance with AS/NZS3500.2.

PLEASE NOTE: The undiluted discharge from a waterless urinal must not be transported through copper or copper alloy pipework.

1. Take the height from the floor and mark holes with fitting No. (19). Drill holes and mount fitting No. (19).
2. Mount the wastewater pipes as shown below. Make sure the distance from the wall to centre of the pipe is around 107 mm.
3. Hold the urinal against the wall and push firmly onto the fitting No. (19) – ensuring the pipe is connected firmly
Please note: Between urinal and wall should be a gap of approx. 2 to 5 mm, so that tension cracks can be prevented.
4. Fill the waste trap Pos. (B) full with water.
5. Insert the stainless steel cover Pos. (A).
6. Pour 1 bottle uriLOCK (0,3 litres) over the cover.
7. Seal the gap between the wall and the urinal with silicone.
8. The uridan-urinal is now ready for use!

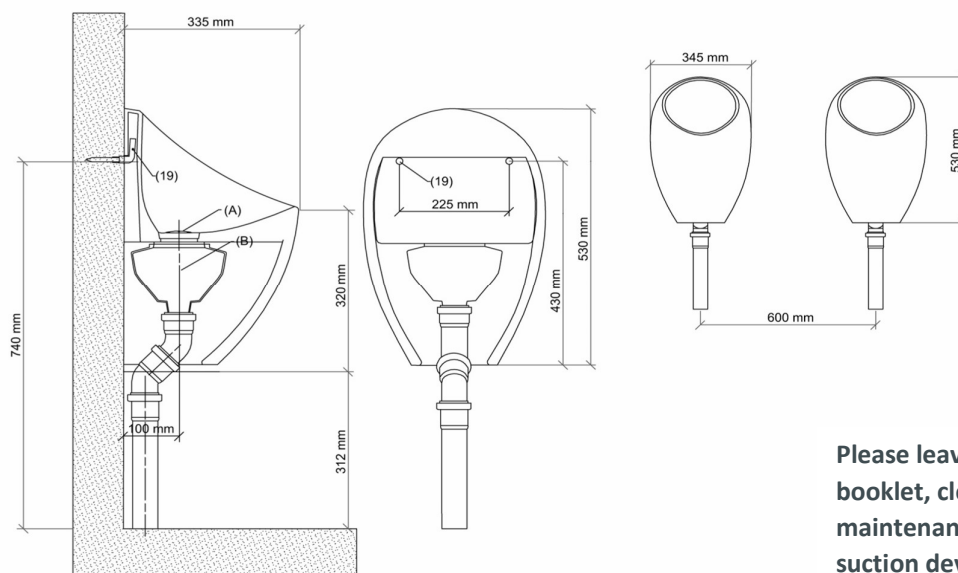

Please leave customer care booklet, cleaning and maintenance instructions and suction device with customer.