

## Installation Instructions

### Captain

by designer Yu Bobek

Model: GX-10  
Material: glass reinforced plastic (GRP)  
Installation: vertical




**Installation of the uridan water free urinals is very simple.**

If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation.

The uridan urinals function without water, and must be fitted to a 50mm waste pipe. Installation should be carried out by authorized plumbers in accordance with AS/NZS3500.2.

**PLEASE NOTE:** The undiluted discharge from a waterless urinal must not be transported through copper or copper alloy pipework.

1. Mark holes for fittings No. (20) and install bracket.
2. Hold the urinal against the wall and push firmly onto fitting No. (20). Slide the urinal down to the 50mm waste outlet.
3. Fill the waste trap (Position B) full with water.
4. Insert the stainless steel cover (Position A).
5. Pour 1 bottle uriLOCK ( 0.3 litres) over the cover.
6. Apply silicon sealant around the edge of the urinal - between the urinal, the wall and the floor.
7. The uridan urinal is now ready for use!

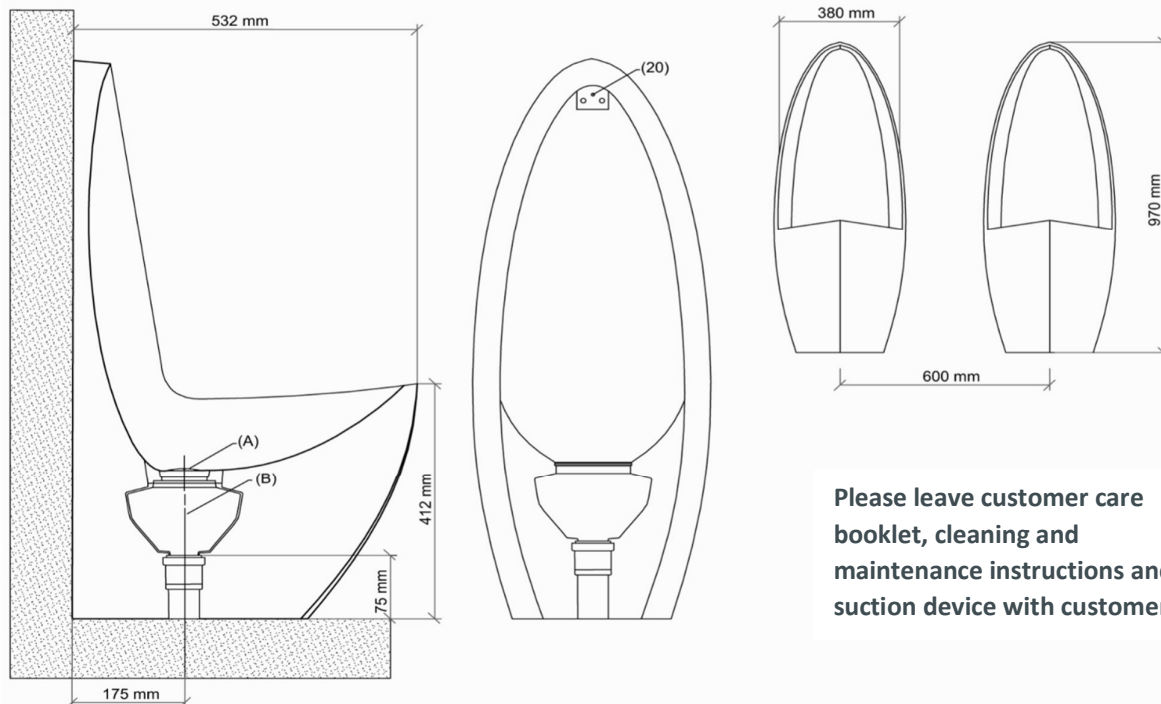

**Please leave customer care booklet, cleaning and maintenance instructions and suction device with customer.**