

# Installation Instructions

## Crew - Length 240 cm

by designer uridan a/s




Model: GR2400-10  
 Material: glass reinforced plastic (GRP)  
 Installation: horizontal or vertical

**Installation of the uridan water free urinals is very simple.**  
 If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation.

The urinal must be fitted to a 50mm waste pipe. Installation should be carried out by an authorised plumber in accordance with AS/NZS 3500.2.

**PLEASE NOTE:** The undiluted discharge from a waterless urinal must not be transported through copper or copper alloy pipework.

1. Mark holes for 3 x fittings no.8 and install brackets.
2. Hold the urinal against the wall and press firmly onto fittings (no. 8). Connect urinal to the waste pipe.
3. Adjust fitting no. (14), mark holes, drill holes and mount fitting no. (14) – Please note - This fitting is only required for horizontal installs!
4. Install the shroud (Position C) with the enclosed screws.
3. Fill the waste trap (Position B) with water.
4. Insert the stainless steel cover (Position A).
5. Pour 1 bottle uriLOCK (0.3 litre) over the stainless steel cover.
6. Apply silicon sealant between the urinal and wall. The urinal is now ready for use!

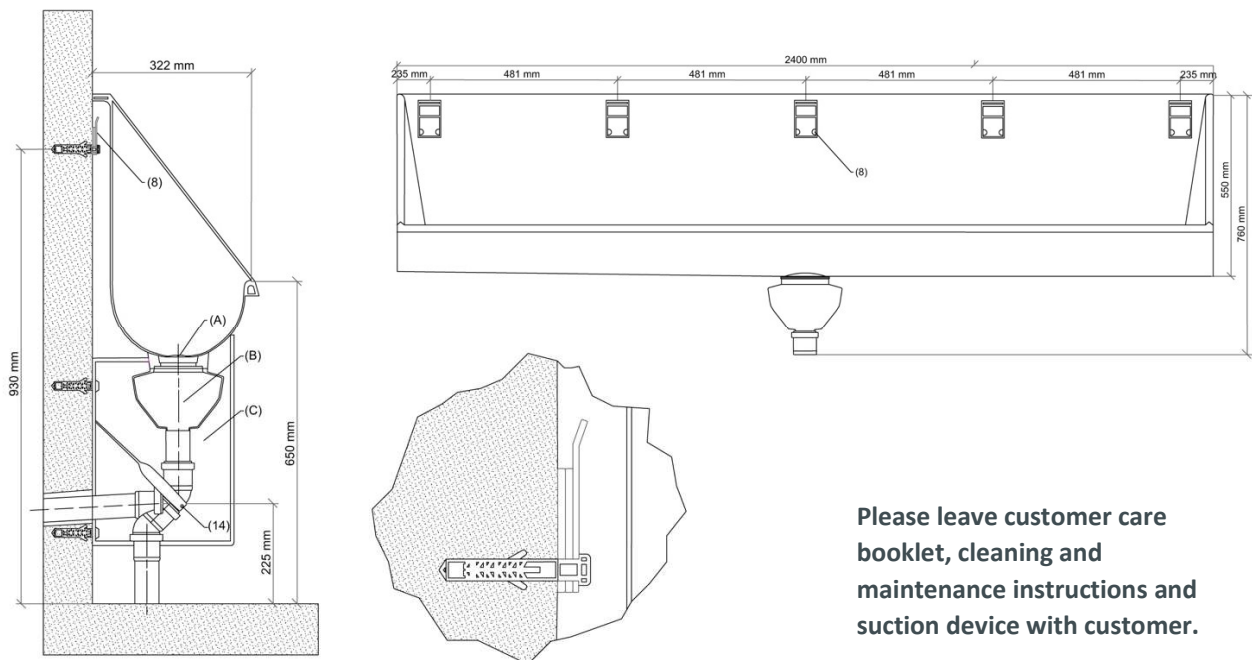

**Please leave customer care booklet, cleaning and maintenance instructions and suction device with customer.**