


Installation Instructions

Parts List |



1 x fitting No. 20 2 x screws fitting No. 20

Fitting Kit |



1 x uriLOCK 0.3 L 1 x uriCLEAN 0.5 L 1 x uriCLOTH 1 x Cover 1 x suction device

*Toilet seat packed separately – incl. installation instructions |

Note |

EN If you retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation.

The uridan urinals work without water and the urinals should be fitted to a 50 mm waste pipe.


Installation should be carried out by authorized plumbers in accordance with AZ/NZ3500.2.

PLEASE NOTE: The undiluted discharge from a waterless urinal must not be transported through copper or copper alloy pipework.

Installation Instructions

COMPASS GY-W

glass fibre reinforced plastic (GRP)

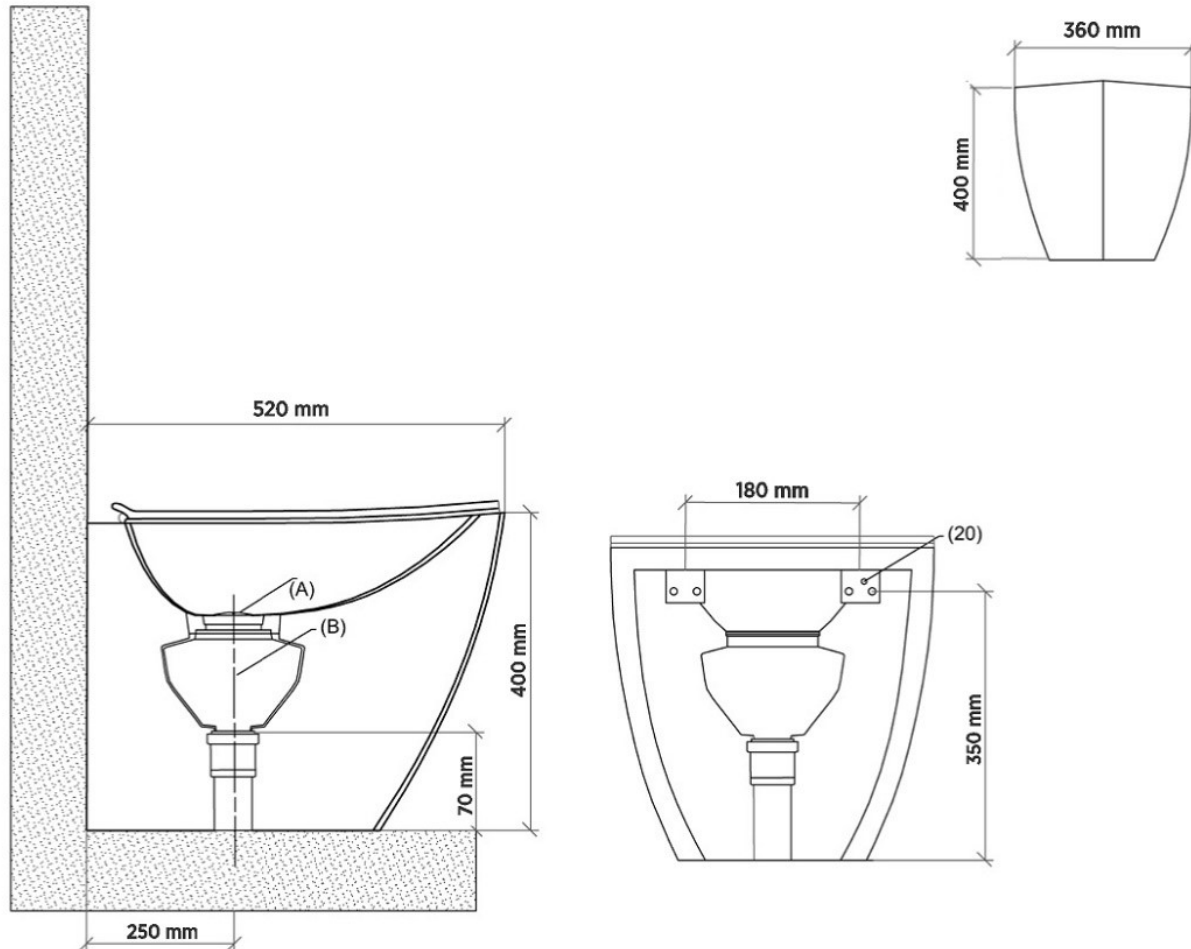

EN

1. Mark holes for fitting No. (20) and install.
 2. Hold the urinal against the wall and push firmly onto fitting No. (20). Slide the urinal down to connect to the 50mm waste outlet.
 3. Fill the waste trap Pos. (B) full with water.
 4. Insert the stainless steel cover Pos. (A).
 5. Pour 1 bottle uriLOCK (0,3 liter) over the cover.
 6. Apply silicon sealant around the edge of the urinal – between urinal wall & floor.
- The uridan urinal is now ready for use!

Please leave customer care booklet, cleaning and maintenance instructions and suction device with customer.