


Installation Instruction

Parts List |



2 x screws No. 19

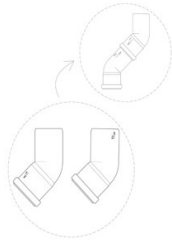

2 x 45° bend

Fitting Kit |



1 x uriLOCK 0.3 L



1 x uriCLEAN 0.5 L



1 x uriCLOTH



1 x Cover



1 x suction device

Note |

Installation of the uridan waterless urinal is very simple.

If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation. Please also remove any existing s-trap to avoid double trapping the urinal.


The uridan urinals work without water, and must be fitted to a 50mm waste pipe. Installation should be carried out by authorized plumbers in accordance with AZ/NZS3500.2.

PLEASE NOTE: The undiluted discharge from a waterless urinal must not be transported through copper or copper alloy pipework.



Installation Instruction

CADET KVC-10
ceramic | vertical

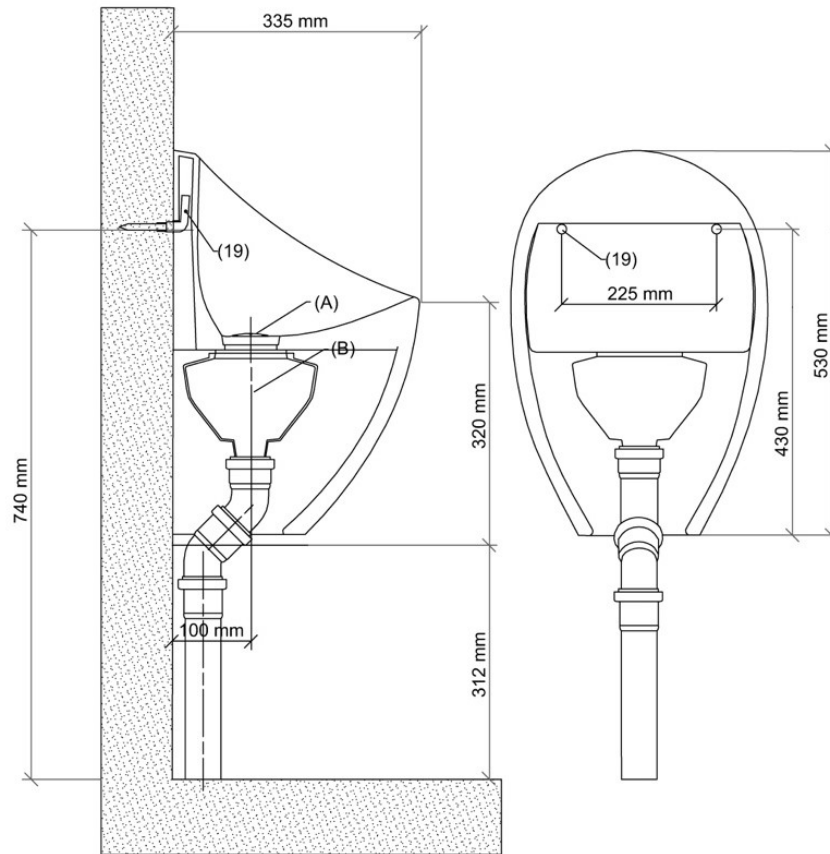

Installation

1. Measure the distance from the floor and mark holes for fitting No. (19). Drill holes and mount fitting No. (19).
2. Mount the wastewater pipe as per the drawing. The distance from the wall to center of the pipe should be close to 107 mm.
3. Hold the urinal against the wall and push firmly onto the fitting No. (19). Ensure the waste pipe connection is maintained.
Please note: Between urinal and wall should be a gap of approx. 2 to 5 mm, so that tension cracks can be prevented.
4. Fill the waste trap (Position B) full with water.
5. Insert the stainless steel cover (Position A).
6. Pour 1 bottle uriLOCK (0.3 litre) over the cover.
7. Seal the gap between the wall and the urinal with silicone.
The uridan urinal is now ready for use!

**Please leave customer care booklet, cleaning and maintenance instructions,
cleaning spray, cleaning cloth and suction device with customer.**