


Installation Instructions

Parts List |

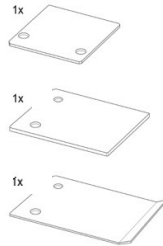


4 x screws fitting No. 8



2 x fitting No. 8

SPINNAKER SCR

glass reinforced plastic (GRP) |

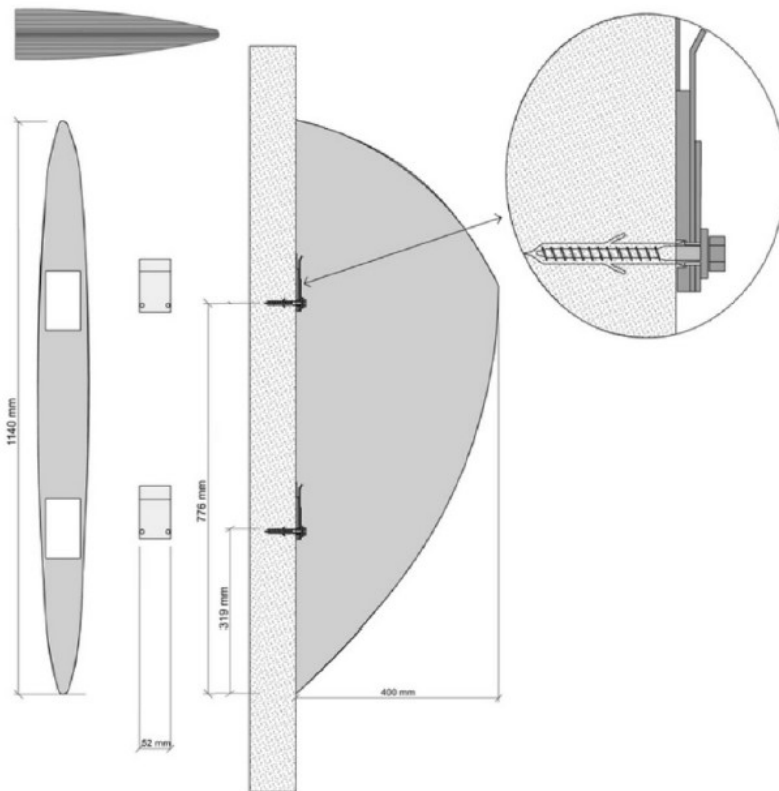

Installation

1. The uridan privacy screen is mounted with 2 hidden brackets using 2x2 pieces screws (Fitting No. 8).
2. The lower edge of the partition wall should be positioned in line with the lower edge of the urinal. The usual distance between two urinals is 600 mm (from the centre of one urinal to the centre of the next). The uridan Spinnaker privacy screen should be installed in the middle between two urinals.
3. After mounting, apply silicon sealant around outer edge of the screen.
4. Included in the box you will find the components and screws to mount the Spinnaker to a solid wall. For all other wall types, appropriate fixtures should be used.