


Installation Instructions

Fitting Kit |

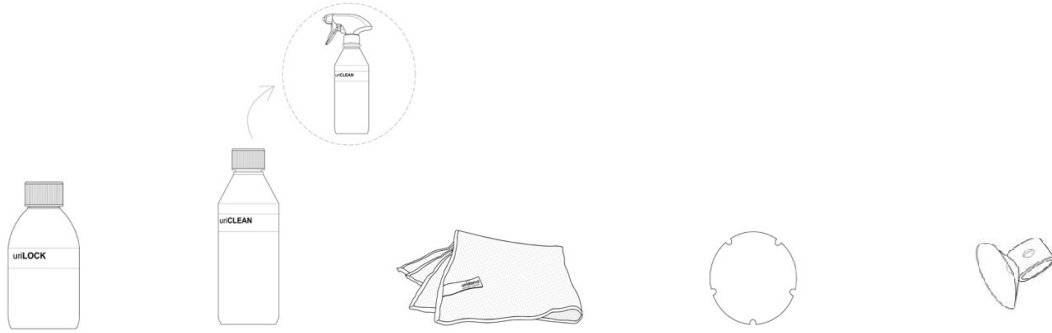

1 x uriLOCK 0.3 L

1 x uriCLEAN 0.5 L

1 x uriCLOTH

1 x Cover

1 x suction device

Note |

Installation of the uridan waterless urinal is very simple.

If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation. Please also remove any existing s-trap to avoid double trapping the urinal.


The uridan urinals work without water, and must be fitted to a 65mm waste pipe. Installation should be carried out by authorized plumbers in accordance with AS/NZS3500.1 and AS/NZS3500.2.

PLEASE NOTE: Refer AS/NZA 3500.2:2025 Clause 13.24.2.3 for installation limitations for undiluted discharge from a urinal.

Installation Instructions

PYLON MAXI GVT-10

glass reinforced plastic (GRP) | vertical

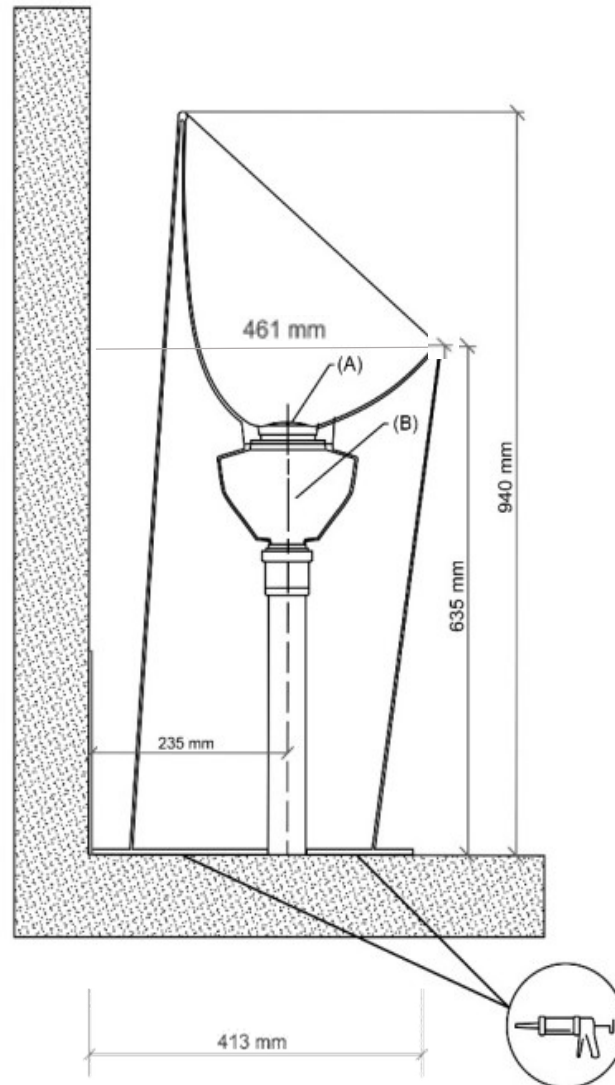

*Silicone not included

Installation

1. Adjust the waste pipe.
2. Place the urinal above the waste pipe in the correct position, and fix with silicone (silicone not included).
3. Fill the waste trap (Position B) with water.
4. Insert the stainless steel cover (Position A).
5. Pour 1 bottle uriLOCK (0.3 litre) over the cover.
6. Apply silicon sealant on the underside of the urinal, and attach the urinal to the floor. Let the silicone dry. The urinal is now ready for use!

Please leave customer care booklet, cleaning and maintenance instructions, cleaning spray, cleaning cloth and suction device with customer.